





# **TRIPLE S** *Customs*

## **CHEVROLET AVALANCHE 2002-2005 VEHICLE WIRING**

WIRING INFORMATION: 2002 Chevy Avalanche





WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Brown Plug At Body Control Module
POWER DOOR UNLOCK (+)	WHITE	Brown Plug At Body Control Module
PARKING LIGHTS (+)	BROWN	Blue Plug At Body Control Module
DRIVER DOOR TRIGGER (-)	TAN	Purple Plug At Body Control Module
PASSENGER DOORS TRIGGER (-)	BLUE/WHITE	Blue Plug At Body Control Module
DOME LIGHT SUPERVISION	USE DOOR TRIGGER WIRE	
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT. GREEN	Purple Plug At Body Control Module
TACHOMETER WIRE	WHITE	Engine Control Module Near Battery
BRAKE WIRE (+)	WHITE	Large Black Junction Block Above BCM
HORN TRIGGER (-)	BLACK	Brown Plug At Body Control Module
DIESEL WAIT-TO-START (-)	DARK BLUE	Behind Instrument Cluster
LEFT FRONT WINDOW UP	BLUE	At Window Switch In Driver Door
LEFT FRONT WINDOW DOWN	BROWN	At Window Switch In Driver Door
RIGHT FRONT WINDOW UP	BLUE	At Window Switch In Passenger Door
RIGHT FRONT WINDOW DOWN	BROWN	At Window Switch In Passenger Door

The Body Control Module is directly below the steering column under the dash.  
 This vehicle is equipped with Passlock II anti-theft system. This must be bypassed when installing a remote start system.

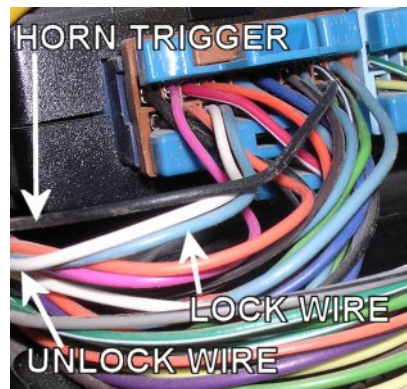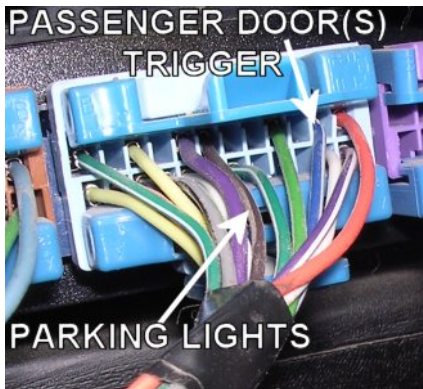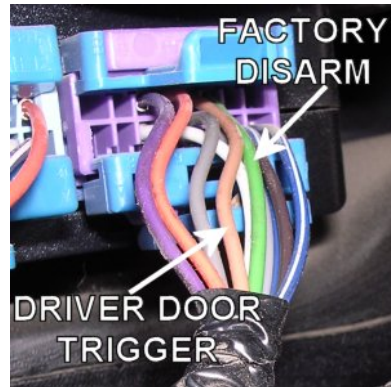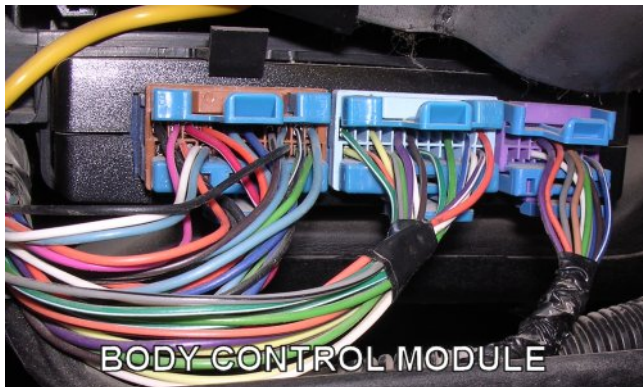





WIRING INFORMATION: 2003 Chevy Avalanche

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged.		
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	LT. BLUE	At BCM
POWER DOOR UNLOCK (-)	WHITE	At BCM
These power door lock wires are only for base model trucks. To interface with the door locks on all vehicles that are NOT base models, a databus module must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	GRAY/BLACK	Brown Plug At BCM
DRIVER DOOR TRIGGER WIRE (-)	GRAY/BLACK	At Module Inside Driver Door
FRONT PASSENGER DOOR TRIGGER (-)	GRAY/BLACK	At Module Inside Front Passenger Door
LEFT REAR DOOR TRIGGER (-)	BLUE/BLACK	Purple Plug At BCM
RIGHT REAR DOOR TRIGGER WIRE (-)	LT.GREEN/BLACK	Purple Plug At BCM
REAR DOOR TRIGGER (-)	PINK/BLACK	Purple Plug At BCM
DOMELIGHT SUPERVISION (-)	GRAY/BLACK	Black Plug At BCM
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT. GREEN	At Module Inside Driver's Door
TACHOMETER WIRE	Use any wire that is NOT PINK, BLACK, or BROWN	At Any Fuel Injector
BRAKE WIRE (+)	WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BLACK	White Plug At BCM
LEFT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Window Switch Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	TAN	Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Window Switch Inside Right Rear Door
This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system. The BCM is under the dash directly below the steering column.		

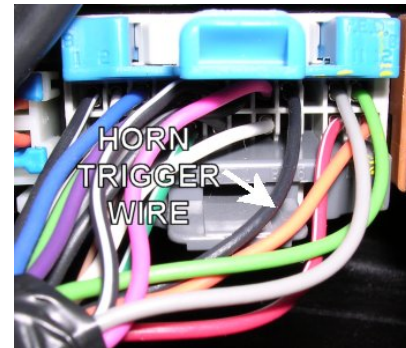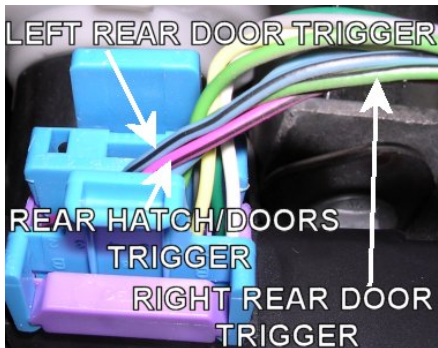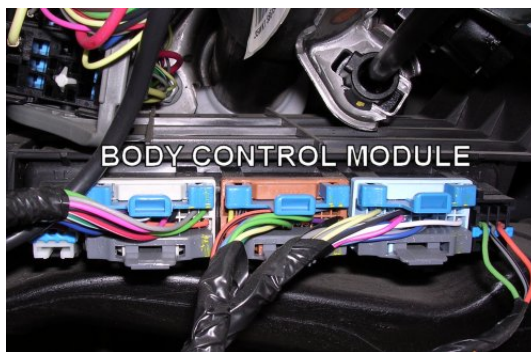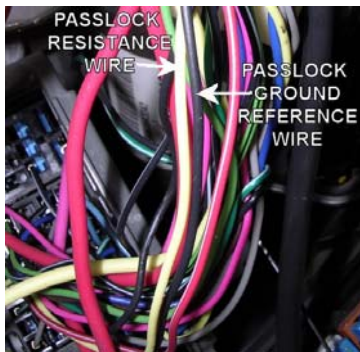

WIRING INFORMATION: 2004 Chevy Avalanche

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged.		
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	LT. BLUE	At BCM
POWER DOOR UNLOCK (-)	WHITE	At BCM
These power door lock wires are only for base model trucks. To interface with the door locks on all vehicles that are NOT base models, a databus module must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	GRAY/BLACK	Brown Plug At BCM
DRIVER DOOR TRIGGER WIRE (-)	GRAY/BLACK	At Module Inside Driver Door
FRONT PASSENGER DOOR TRIGGER (-)	GRAY/BLACK	At Module Inside Front Passenger Door
LEFT REAR DOOR TRIGGER (-)	BLUE/BLACK	Purple Plug At BCM
RIGHT REAR DOOR TRIGGER WIRE (-)	LT.GREEN/BLACK	Purple Plug At BCM
REAR DOOR TRIGGER (-)	PINK/BLACK	Purple Plug At BCM
DOMELIGHT SUPERVISION (-)	GRAY/BLACK	Black Plug At BCM
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT. GREEN	At Module Inside Driver's Door
TACHOMETER WIRE	Use any wire that is NOT PINK, BLACK, or BROWN	At Any Fuel Injector
BRAKE WIRE (+)	WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BLACK	White Plug At BCM
LEFT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Window Switch Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	TAN	Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Window Switch Inside Right Rear Door
This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system. The BCM is under the dash directly below the steering column.		

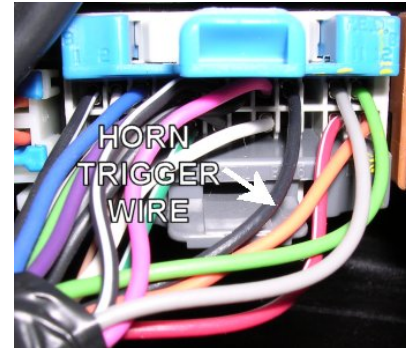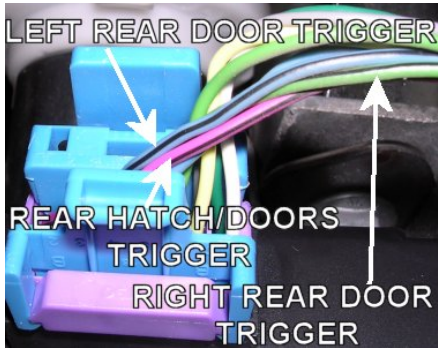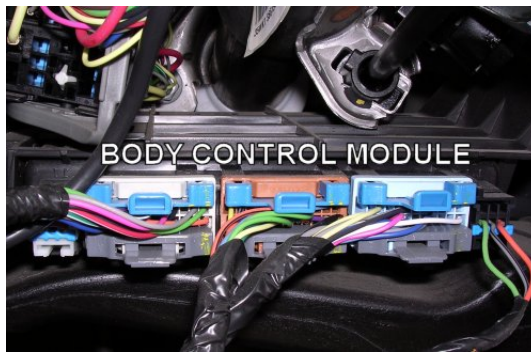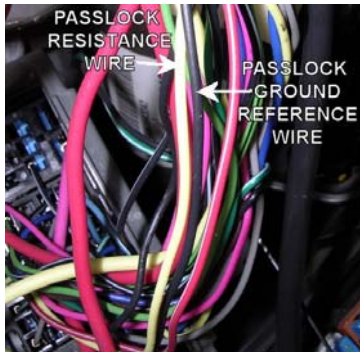

WIRING INFORMATION: 2005 Chevy Avalanche

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged.		
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	LT. BLUE	At BCM
POWER DOOR UNLOCK (-)	WHITE	At BCM
These power door lock wires are only for base model trucks. To interface with the door locks on all vehicles that are NOT base models, a databus module must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	GRAY/BLACK	Brown Plug At BCM
DRIVER DOOR TRIGGER WIRE (-)	GRAY/BLACK	At Module Inside Driver Door
FRONT PASSENGER DOOR TRIGGER (-)	GRAY/BLACK	At Module Inside Front Passenger Door
LEFT REAR DOOR TRIGGER (-)	BLUE/BLACK	Purple Plug At BCM
RIGHT REAR DOOR TRIGGER WIRE (-)	LT.GREEN/BLACK	Purple Plug At BCM
REAR DOOR TRIGGER (-)	PINK/BLACK	Purple Plug At BCM
DOMELIGHT SUPERVISION (-)	GRAY/BLACK	Black Plug At BCM
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT. GREEN	At Module Inside Driver's Door
TACHOMETER WIRE	Use any wire that is NOT PINK, BLACK, or BROWN	At Any Fuel Injector
BRAKE WIRE (+)	WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BLACK	White Plug At BCM
LEFT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Window Switch Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	TAN	Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Window Switch Inside Right Rear Door
This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system. The BCM is under the dash directly below the steering column.		

