
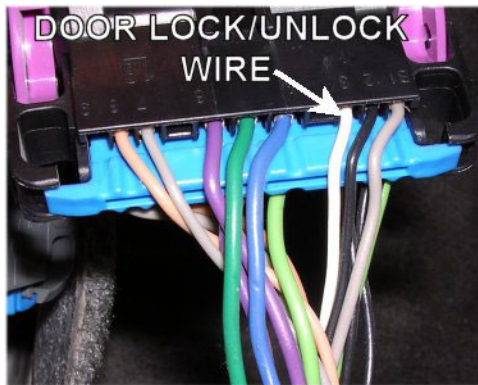


# **TRIPLE S** *Customs*

**OLDSMOBILE ALERO 1999-2003  
VEHICLE WIRING**



WIRING INFORMATION: 1999 Oldsmobile Alero

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition harness
STARTER	YELLOW	Ignition harness
IGNITION	PINK	Ignition harness
SECOND IGNITION	DK. GREEN	Ignition harness
ACCESSORY	ORANGE	Ignition harness
SECOND ACCESSORY	BROWN	Ignition harness
POWER DOOR LOCK AND UNLOCK	WHITE	Black Connector In Driver's Kick Panel
The same wire is used to lock and unlock the doors. Lock is a negative trigger. Unlock is a negative trigger through a 1500 ohm resistor. Relays must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Passenger Kick Panel
DRIVER DOOR TRIGGER (-)	GREEN/BLACK	Black Connector In Driver's Kick Panel
PASSENGER DOOR TRIGGER (-)	LT.BLUE	Harness At Driver's Door Sill Leading Towards Driver's Seat
DOME SUPERVISION (-)	WHITE	At Under Dash Light
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK	Black Connector In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE	At Ignition coil or ECM
The ECM is located under the left side of the dash to the left of the column.		
BRAKE WIRE (+)	LT. BLUE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
This vehicle is equipped with the Passlock II system. This must be bypassed when installing a remote start system.		

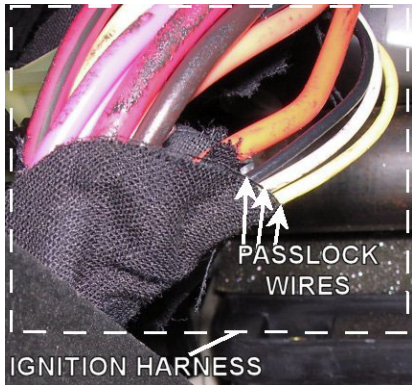

WIRING INFORMATION: 2000 Oldsmobile Alero


WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition harness
STARTER	YELLOW	Ignition harness
IGNITION	PINK	Ignition harness
SECOND IGNITION	DK. GREEN	Ignition harness
ACCESSORY	ORANGE	Ignition harness
SECOND ACCESSORY	BROWN	Ignition harness
POWER DOOR LOCK AND UNLOCK	WHITE	Black Connector In Driver's Kick Panel
The same wire is used to lock and unlock the doors. Lock is a negative trigger. Unlock is a negative trigger through a 1500 ohm resistor. Relays must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Passenger Kick Panel
DRIVER DOOR TRIGGER (-)	GREEN/BLACK	Black Connector In Driver's Kick Panel
PASSENGER DOOR TRIGGER (-)	LT.BLUE	Harness At Driver's Door Sill Leading Towards Driver's Seat
DOME SUPERVISION (-)	WHITE	At Under Dash Light
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK	Black Connector In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE	At Ignition coil or ECM
The ECM is located under the left side of the dash to the left of the column.		
BRAKE WIRE (+)	LT. BLUE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
This vehicle is equipped with the Passlock II system. This must be bypassed when installing a remote start system.		

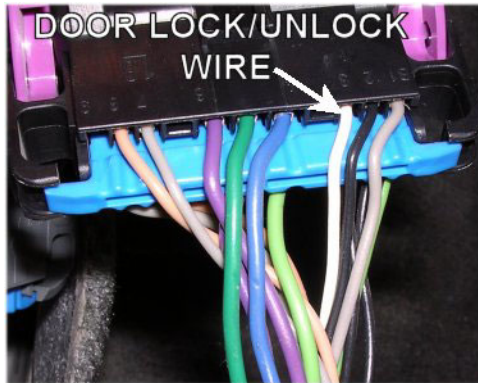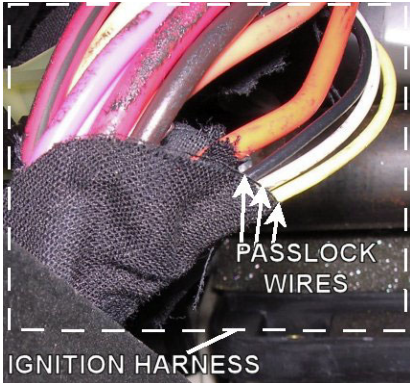





WIRING INFORMATION: 2001 Oldsmobile Alero

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition harness
STARTER	YELLOW	Ignition harness
IGNITION	PINK	Ignition harness
SECOND IGNITION	DK. GREEN	Ignition harness
ACCESSORY	ORANGE	Ignition harness
SECOND ACCESSORY	BROWN	Ignition harness
POWER DOOR LOCK AND UNLOCK	WHITE	Black Connector In Driver's Kick Panel
The same wire is used to lock and unlock the doors. Lock is a negative trigger. Unlock is a negative trigger through a 1500 ohm resistor. Relays must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Passenger Kick Panel
DRIVER DOOR TRIGGER (-)	GREEN/BLACK	Black Connector In Driver's Kick Panel
PASSENGER DOOR TRIGGER (-)	LT.BLUE	Harness At Driver's Door Sill Leading Towards Driver's Seat
DOME SUPERVISION (-)	WHITE	At Under Dash Light
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK	Black Connector In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE	At Ignition coil or ECM
The ECM is located under the left side of the dash to the left of the column.		
BRAKE WIRE (+)	LT. BLUE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
This vehicle is equipped with the Passlock II system. This must be bypassed when installing a remote start system.		

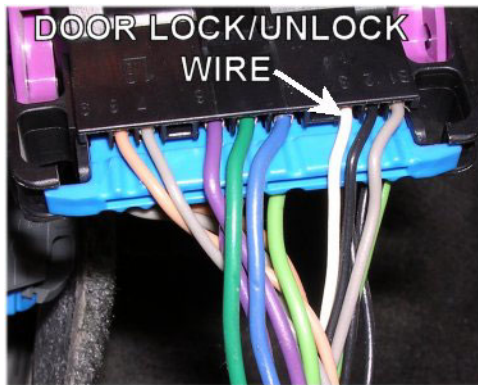

WIRING INFORMATION: 2002 Oldsmobile Alero

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition harness
STARTER	YELLOW	Ignition harness
IGNITION	PINK	Ignition harness
SECOND IGNITION	DK. GREEN	Ignition harness
ACCESSORY	ORANGE	Ignition harness
SECOND ACCESSORY	BROWN	Ignition harness
POWER DOOR LOCK AND UNLOCK	WHITE	Black Connector In Driver's Kick Panel
The same wire is used to lock and unlock the doors. Lock is a negative trigger. Unlock is a negative trigger through a 1500 ohm resistor. Relays must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Passenger Kick Panel
DRIVER DOOR TRIGGER (-)	GREEN/BLACK	Black Connector In Driver's Kick Panel
PASSENGER DOOR TRIGGER (-)	LT.BLUE	Harness At Driver's Door Sill Leading Towards Driver's Seat
DOME SUPERVISION (-)	WHITE	At Under Dash Light
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK	Black Connector In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE	At Ignition coil or ECM
The ECM is located under the left side of the dash to the left of the column.		
BRAKE WIRE (+)	LT. BLUE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
This vehicle is equipped with the Passlock II system. This must be bypassed when installing a remote start system.		

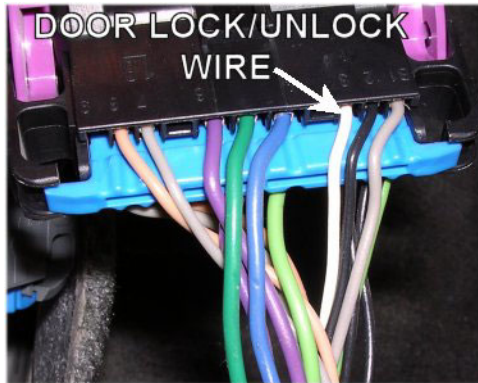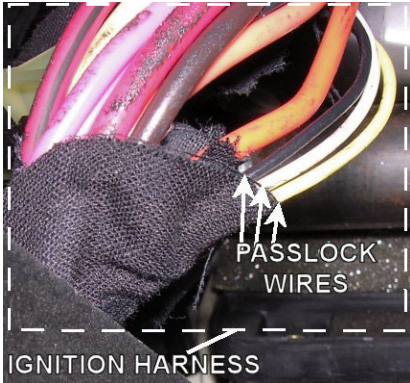



WIRING INFORMATION: 2003 Oldsmobile Alero

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition harness
STARTER	YELLOW	Ignition harness
IGNITION	PINK	Ignition harness
SECOND IGNITION	DK. GREEN	Ignition harness
ACCESSORY	ORANGE	Ignition harness
SECOND ACCESSORY	BROWN	Ignition harness
POWER DOOR LOCK AND UNLOCK	WHITE	Black Connector In Driver's Kick Panel
The same wire is used to lock and unlock the doors. Lock is a negative trigger. Unlock is a negative trigger through a 1500 ohm resistor. Relays must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Passenger Kick Panel
DRIVER DOOR TRIGGER (-)	GREEN/BLACK	Black Connector In Driver's Kick Panel
PASSENGER DOOR TRIGGER (-)	LT.BLUE	Harness At Driver's Door Sill Leading Towards Driver's Seat
DOME SUPERVISION (-)	WHITE	At Under Dash Light
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK	Black Connector In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE	At Ignition coil or ECM
The ECM is located under the left side of the dash to the left of the column.		
BRAKE WIRE (+)	LT. BLUE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
This vehicle is equipped with the Passlock II system. This must be bypassed when installing a remote start system.		

