

TRIPLE S *Customs*

**PONTIAC BONNEVILLE 1990-2005
VEHICLE WIRING**

WIRING INFORMATION: 1990 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Driver's Kick Panel Or Driver Door Harness
POWER DOOR UNLOCK (+)	BLACK	Driver's Kick Panel Or Driver Door Harness
PARKING LIGHTS (+)	BROWN	Headlight Switch Or Harness In Kick Panel Running To Rear Of Vehicle
DOOR TRIGGER (-)	LT. BLUE OR WHITE	Harness In Driver's Kick Panel
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK RELEASE (+)	BLACK	At Trunk Release Switch
FACTORY ALARM ARM (-)	YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	LT. GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE OR WHITE	Behind Instrument Cluster or Ignition Coil
BRAKE WIRE (+)	LT. BLUE OR WHITE	Brake Switch
HORN TRIGGER (-)	BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

WIRING INFORMATION: 1991 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	WHITE	Light Under Dash
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLACK	At Light In Trunk
TRUNK RELEASE (+)	LT.BLUE or BLACK/WHITE	At Trunk Release Switch
FACTRY ALARM ARM (-)	YELLOW	Harness Coming Into Vehicle From Driver Door
FACTRY ALARM DISARM (-)	LT. GREEN	Harness Coming Into Vehicle From Driver Door
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	LT.BLUE	Harness In Driver Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

WIRING INFORMATION: 1992 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	WHITE	Light Under Dash
TRUNK TRIGGER (-)	BLACK	At Light In Trunk
TRUNK RELEASE (+)	LT.BLUE or BLACK/WHITE	At Trunk Release Switch
FACTRY ALARM ARM (-)	YELLOW	Harness Coming Into Vehicle From Driver Door
FACTRY ALARM DISARM (-)	LT. GREEN	Harness Coming Into Vehicle From Driver Door
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	LT.BLUE	Harness In Driver Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

WIRING INFORMATION: 1993 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	WHITE	Light Under Dash
TRUNK TRIGGER (-)	BLACK	At Light In Trunk
TRUNK RELEASE (+)	LT.BLUE or BLACK/WHITE	At Trunk Release Switch
FACTRY ALARM ARM (-)	YELLOW	Harness Coming Into Vehicle From Driver Door
FACTRY ALARM DISARM (-)	LT. GREEN	Harness Coming Into Vehicle From Driver Door
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	LT.BLUE	Harness In Driver Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

WIRING INFORMATION: 1991 Pontiac Bonneville SSE/SSEi

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (-)	YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	LT.GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Module On Left Side of Steering Column
DOOR TRIGGER (-)	WHITE	Behind Instrument Cluster
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	LT.BLUE	Module Under Dash On The Right Side
TRUNK RELEASE (+)	LT.BLUE or BLACK/WHITE	Relay Behind Fuse Box
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	PURPLE/WHITE	ECM Under Dash On The Right Side
BRAKE WIRE (+)	LT.BLUE/BLACK	Harness In Driver's Kick Panel Or Brake Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

WIRING INFORMATION: 1992 Pontiac Bonneville SSE/SSEi

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (-)	YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	LT.GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Module On Left Side of Steering Column
DOOR TRIGGER (-)	WHITE	Behind Instrument Cluster
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	LT.BLUE	Module Under Dash On The Right Side
TRUNK RELEASE (+)	LT.BLUE or BLACK/WHITE	Relay Behind Fuse Box
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	PURPLE/WHITE	ECM Under Dash On The Right Side
BRAKE WIRE (+)	LT.BLUE/BLACK	Harness In Driver's Kick Panel Or Brake Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1993 Pontiac Bonneville SSE/SSEi

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (-)	YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	LT.GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Module On Left Side of Steering Column
DOOR TRIGGER (-)	WHITE	Behind Instrument Cluster
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	LT.BLUE	Module Under Dash On The Right Side
TRUNK RELEASE (+)	LT.BLUE or BLACK/WHITE	Relay Behind Fuse Box
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	PURPLE/WHITE	ECM Under Dash On The Right Side
BRAKE WIRE (+)	LT.BLUE/BLACK	Harness In Driver's Kick Panel Or Brake Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1994 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT.BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	WHITE	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	DK.BLUE or WHITE	Harness Coming Into Vehicle From Driver's Door
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	ORANGE/BLACK	Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT.GREEN	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	PURPLE/WHITE or WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	WHITE or LT.BLUE	Brake Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door

This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

WIRING INFORMATION: 1995 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT.BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	WHITE	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	DK.BLUE or WHITE	Harness Coming Into Vehicle From Driver's Door
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	ORANGE/BLACK	Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT.GREEN	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	PURPLE/WHITE or WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	WHITE or LT.BLUE	Brake Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door

This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

WIRING INFORMATION: 1996 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Harness Coming Into Vehicle From Driver's Door
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Harness Coming Into Vehicle From Driver's Door
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DRIVER DOOR TRIGGER (-)	TAN	In Harness Coming Into Vehicle From Driver's Door
PASSENGER DOORS TRIGGER (-)	DK.BLUE	In Harness In Driver's Kick Panel
DOVE SUPERVISION (-)	LT.GREEN/BLACK	BCM Behind Glove Box
TRUNK TRIGGER (-)	ORANGE/BLACK	Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT.GREEN	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	PURPLE/WHITE or WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	WHITE or LT.BLUE	Brake Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1997 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Harness Coming Into Vehicle From Driver's Door
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Harness Coming Into Vehicle From Driver's Door
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DRIVER DOOR TRIGGER (-)	TAN	In Harness Coming Into Vehicle From Driver's Door
PASSENGER DOORS TRIGGER (-)	DK.BLUE	In Harness In Driver's Kick Panel
DOME SUPERVISION (-)	LT.GREEN/BLACK	BCM Behind Glove Box
TRUNK TRIGGER (-)	ORANGE/BLACK	Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT.GREEN	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	PURPLE/WHITE or WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	WHITE or LT.BLUE	Brake Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1998 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Harness Coming Into Vehicle From Driver's Door
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Harness Coming Into Vehicle From Driver's Door
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DRIVER DOOR TRIGGER (-)	TAN	In Harness Coming Into Vehicle From Driver's Door
PASSENGER DOORS TRIGGER (-)	DK.BLUE	In Harness In Driver's Kick Panel
DOVE SUPERVISION (-)	LT.GREEN/BLACK	BCM Behind Glove Box
TRUNK TRIGGER (-)	ORANGE/BLACK	Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT.GREEN	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	PURPLE/WHITE or WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	WHITE or LT.BLUE	Brake Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1999 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	RED	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Harness Coming Into Vehicle From Driver's Door
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Harness Coming Into Vehicle From Driver's Door
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DRIVER DOOR TRIGGER (-)	TAN	In Harness Coming Into Vehicle From Driver's Door
PASSENGER DOORS TRIGGER (-)	DK.BLUE	In Harness In Driver's Kick Panel
DOVE SUPERVISION (-)	LT.GREEN/BLACK	BCM Behind Glove Box
TRUNK TRIGGER (-)	ORANGE/BLACK	Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT.GREEN	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	PURPLE/WHITE or WHITE	Ignition Coil Or Behind Instrument Cluster
BRAKE WIRE (+)	WHITE or LT.BLUE	Brake Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2000 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
<ul style="list-style-type: none"> ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V. 		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2001 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
<ul style="list-style-type: none"> ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V. 		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2002 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
<ul style="list-style-type: none"> ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V. 		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2003 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
<ul style="list-style-type: none"> ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V. 		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2004 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	RED/BLACK	At Light In Trunk
TRUNK RELEASE (-)	LT.BLUE	At Module Behind Rear Seat Back In Upper Driver's Side
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2005 Pontiac Bonneville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	RED/BLACK	At Light In Trunk
TRUNK RELEASE (-)	LT.BLUE	At Module Behind Rear Seat Back In Upper Driver's Side
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		